

For further help and advice

Phone: 18001 0800 7311 888 (textphone)
0800 7311 888 (telephone)

Email: helpline@rnid-typetalk.org.uk

Fax: 0151 709 8119

www.typetalk.org

RNID Typetalk
Harrington Road
Brunswick Business Park
Liverpool
L3 4DF

In an emergency dial **18000**

Text users calling from abroad - +44 151 494 1260
Hearing users calling from abroad - +44 151 494 2022

The Customer Support Team are available Monday -
Friday 9am-8pm, Saturday and Sunday 9am-5pm.

This leaflet is available in large print and braille.

The Royal National Institute for Deaf People. Registered Office: 19-23 Featherstone Street, London EC1Y 8SL. A company limited by guarantee registered in England and Wales No. 454169, Registered Charity Numbers 207720 (England and Wales) and SC038926 (Scotland).



User Guide: minicom 7 (VII) text only direct connect

RNID Typetalk

Minicom 7 (VII)

Making a call text only direct connect

1. Switch on the MV11 (M7)
2. Hold down the CTRL key and press number 9 (Dial key)
3. Dial 18001 followed by the FULL telephone number including the area code on your TEXTPHONE and press RETURN
4. You will then see - TXD Dialling - TXD Ringing - TXD Operator Connected PLEASE WAIT
5. The Relay Assistant will type the greeting of the hearing person followed by GA
6. You can now start to type
7. To end the call - switch off the textphone

Minicom 7 (VII)

Receiving a call text only direct connect

1. When the phone rings, switch on the MV11 (M7) and type HELLO
2. You will then see - Call Via TXD - TXD Operator Connected PLEASE WAIT..
3. The Relay Assistant will type what your caller is saying to you
4. When you see GA you can type your reply
5. To end the call - switch off the textphone

Note: Always type HELLO after you have switched on



Certificate No. 547



INVESTOR IN PEOPLE